



## AKT - 85 HYGIENE CABIN UNIT ( SINGLE LEG )


Your gate to protection...

### General Features

- Akt - 80 Hygiene Turnstiles are used for imperative touchless disinfection at the entrance of production areas.
- Thanks to the adjustable amount of spray Akt - 80 Hygiene Turnstiles does not allow passage, provides disinfection of both hands without wasting disinfectant.
- Thanks to its maximum 5 liter reservoir, you can no need to refill.
- Akt - 80 Hygiene Turnstile's durable and climate resistant stainless steel case ensures low service requirement and easy installation.
- 100% Home Production



### AKT -PASS ( Antimicrobial Disinfectant Mop ) ( Optional )

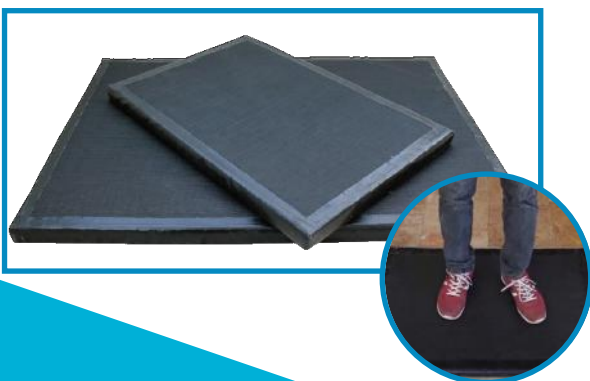

- Microorganisms carried to foot hygienic environments and used to prevent entry of other impurities.
- AKT-PASS edges and top are closed. It has a special filter and keeps dirt. Protects the disinfectant used. Durable, economic and quality.



## Technical Specifications

### Main Body

Material	AISI- 304 - Stainless Steel - Scotch Brite ( Op. AISI-316 Quality)	304
Standard Dimensions ( W x L x H )	32 x 37 x 137 cm	
Sheet Thickness	1,5 mm	


### Electrical Parameters

Operating Voltage / Power Consumption	110 - 240V AC 50/60 Hz (+/- %10) / 30 W	
Nominal / Max Current	250Ma / 850 Ma	
Mean Cycles Between Failure ( MCBF )	1M Cycles	24V DC

### Function Working



Control Systems	All inputs are opto-coupler protected. Controlled by dry contact or grounding input. To be compatible with all kinds of access control units and photocell door systems.	
Output Data (Feedback)	The systems provides dry contact, NO - Normally Open, entry - exit passage feedback by relays	
Passage Direction	Led Warning System (Red / Green Warning)	
Emergency Mode	The gate / turnstile to which the system is connected is released and becomes open to passage.	
Security Sensor	There are 2 optical sensors.	
Usage Capacity	5 Liter Jerrycan ( Average 1100 passage )	
Spraying Amount	2 sec ( 3-5 ml spraying ) ( Adjustable 1-2-3-4-5 seconds programming mode )	
Operating Humidity	0 / + 45° C ( RH 95% not-condensing )	
Operating Temperature	-20° C / + 50° C	
Working Environment	Indoor - Outdoor	
IP Rating	IP - 54	
Disinfectant	Turnstile disinfection systems should be used only in the liquid alcohol-based disinfectant. <b>NOTE: Disinfecting fluid is not included.</b>	

## Technical Drawing

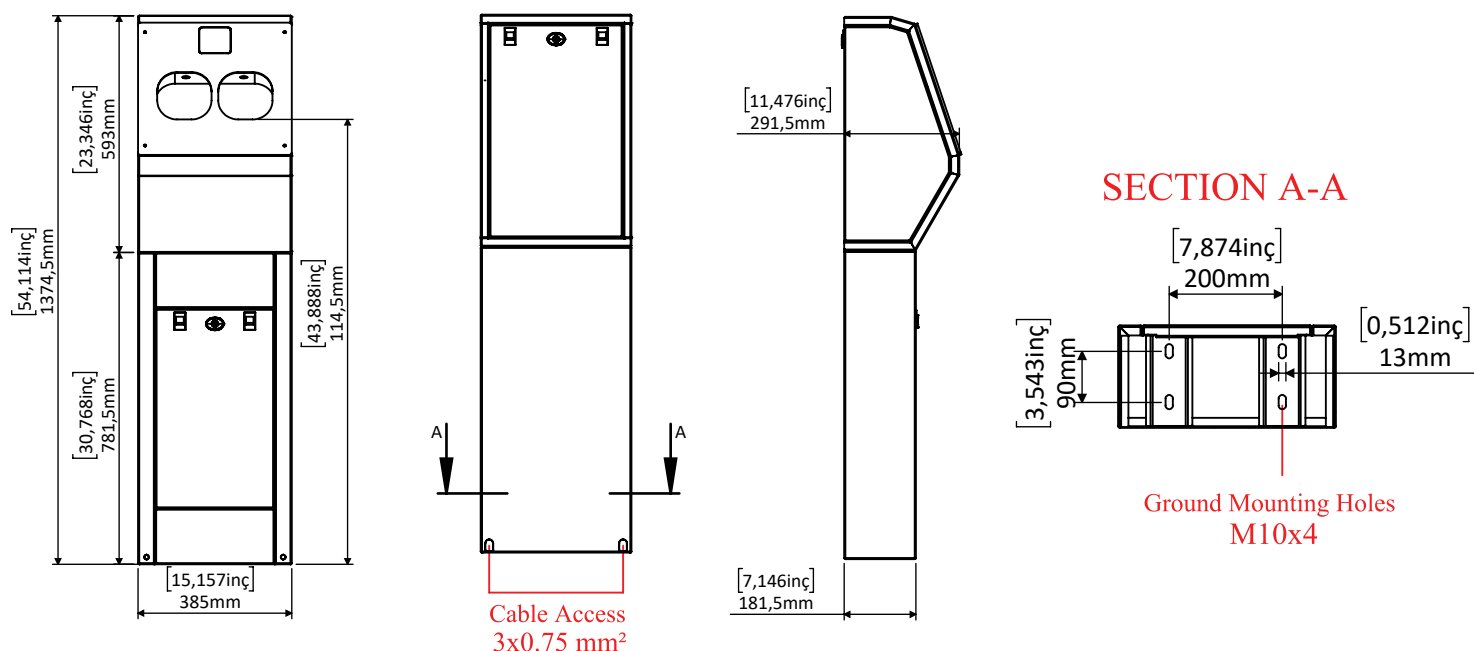

# Aktuel® TURNSTILE

Your Gate to Protection...

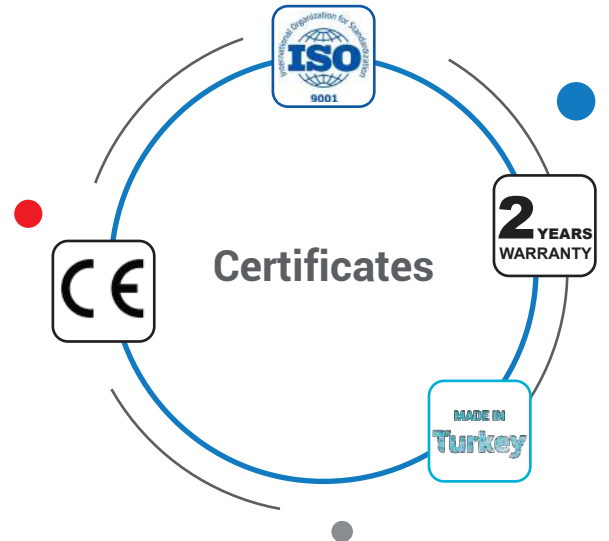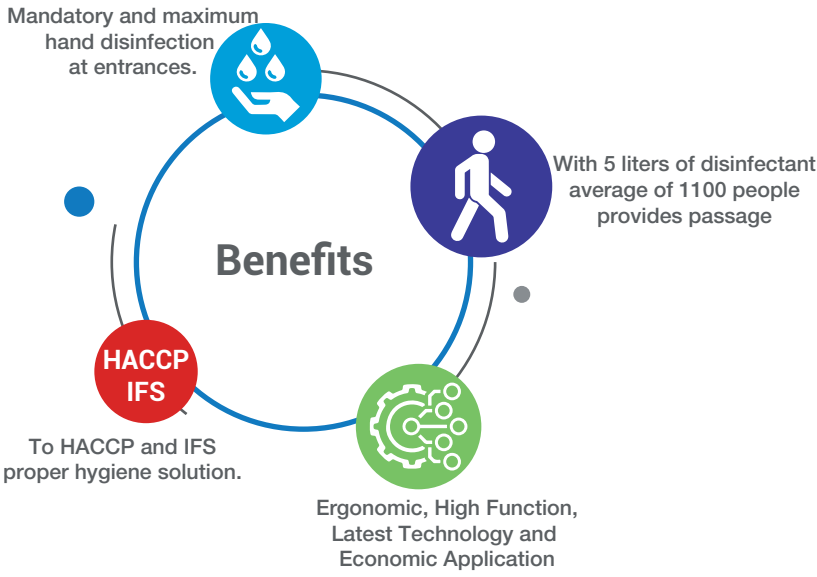

## Factory

Ivedik OSB Agac Isleri San. Sit. 1333.Cad. No:25 Ostim - Yenimahalle  
ANKARA - TURKEY

+90 312 395 02 88

+90 312 395 02 70

## Branch

Perpa Ticaret Merkezi A Blok - Kat:7-8 No:758 Sisli - ISTANBUL - TURKEY

+90 212 320 69 79

+90 212 320 69 79

www.aktuelturnike.com

export@aktuelturnike.com.tr

## Local Reseller